

Troubleshooting error messages E3 & E4 in model(s) PIX-10/15/21 & TCX-11/21/22

217 [Kathryn Smizer](#) Mon, Jan 23, 2012 [FAQ's](#), [FAQ's](#), [How To's, Tricks, Tips](#), [How To's, Tricks, Tips](#),
[PIX-10/15/21](#) 32 197020

Question: Troubleshooting error messages E3 & E4 in model(s) PIX-10/15/21 & TCX-11/21/22.

Answer: See attached document:

Online URL: <http://tkb.amano.com/article.php?id=217>