

Not accepting cards

257 [Alex Nieves](#) Wed, Apr 6, 2011 [FAQ's](#), [How To's](#), [Tricks](#), [Tips](#) 0 8384

MRX 35 DOES NOT ACCEPT CARDS.

ANSWER:

The most common reason is that the actuator came out of place. To fix this:

- 1- Unplug the clock.
- 2- Remove the top cover.
- 3- Find the actuator behind button number 5.
- 4- Push down on the actuator until it snaps back in place. (see image below)
- 5- Put cover back on and test.

Online URL: <http://tkb.amano.com/article.php?id=257>