

PIX-75 Time Clock Will Not Print

311 [Kathryn Smizer](#) Thu, Aug 18, 2011 [How To's, Tricks, Tips](#) 7 16710

AMANO.

Introduction

Problem: The PIX-75 Time Clock will not print on the time card.

Solution I:

Make sure the COVER is securely fastened. If the time is not being displayed on the LCD screen once the cover has been replaced, remove the cover and try to fasten it again. (**note:** if the voice mode is set to "enabled" unit will state "voice mode disabled" once cover is properly secured)

Solution II:

Make sure your PRINT METHOD is properly programmed (options: Auto, Manual, Combination).

See Installation and Operation Guide in the Knowledge Base for a detailed description of this function.

Conclusion

Thank you for your time, and have a great day. As always, feel free to submit ideas on topics you want addressed in the Amano Knowledge Base using the comments feature.

Amano Cincinnati, Inc. reserves the right to make equipment changes and improvements which may not be reflected in this article. Portions of this article may have been updated to include the latest hardware or firmware version, if applicable. Amano assumes no liability for errors and/or omissions. If you should find any errors or unclear information, please notify Amano by posting a comment.

**Customer
Support
Information**

Call toll-free in the U.S.: 800-253-9836 (outside U.S. call 973-364-0294) or Fax: 973-364-1091
Mailing address: Amano Cincinnati, Inc., 140 Harrison Ave., Roseland, New Jersey 07068
Web site: www.amano.com/time • E-mail: support@amano.com

Online URL: <http://tkb.amano.com/article.php?id=311>