

PIX-75 Time Clock Will Not Print

311 [Kathryn Smizer](#) Thu, Aug 18, 2011 [How To's, Tricks, Tips](#) 7 17335

Problem: The PIX-75 Time Clock will not print on the time card.

Solution I:

Make sure the COVER is securely fastened. If the time is not being displayed on the LCD screen once the cover has been replaced, remove the cover and try to fasten it again. (**note:** if the voice mode is set to "enabled" unit will state "voice mode disabled" once cover is properly secured)

Solution II:

Make sure your PRINT METHOD is properly programmed (options: Auto, Manual, Combination).

See Installation and Operation Guide in the Knowledge Base for a detailed description of this function.

Online URL: <http://tkb.amano.com/article.php?id=311>