

Disable PIN/PWD/keypad punching on clock

374 [Frank Mateo](#) Wed, Sep 21, 2011 [FPT-40/80 Fingerprint Terminal](#), [MTX-15 Terminal](#), [Time Guardian Pro 3.7 or lower](#), [Time Guardian Series \(TG 5.x, TG Plus 2.x, TG Pro 4.x\)](#), [Time Guardian Version 4.0 or Lower](#) 0 12219

Disable PIN/PWD/keypad punching on clock

In Time Guardian version 4 or lower:

1. Go to the communication menu
2. Poll/download
3. Select downloading

In Time Guardian version 5 or higher:

1. Go to the edit menu
2. Setup wizard
3. Clock tab
4. Location/terminal button (for tgpro, go directly to locations from the tree menu)
5. Terminals tab
6. Double click on the terminal/serial
7. Options tab
8. Uncheck keypad
9. Apply settings by clicking on green box with check mark all the way out of the wizard
10. Go to the tree, locations
11. Highlight the clock
12. Click on the download icon, bottom right, third from the left, green box with blue down arrow

The above will disable the keypad on the MTX-15 clock.

To disable keypad on the FPT-40, during enrollment - choose the FP option ONLY and not ones that show "PWD".

Online URL: <http://tkb.amano.com/article.php?id=374>