

How to clear memory on PIX55, TCX45, OR PIX28

433 [Frank Mateo](#) Wed, Dec 7, 2011 [Time Clocks](#) 0 8110

How to clear memory on PIX55, TCX45, OR PIX28

1. Press / hold [program button](#)
2. Go to [Other P5](#)
3. Then [dIAg 18](#)
4. CLr d4
5. Choose [32](#) – clears memory

Online URL: <http://tkb.amano.com/article.php?id=433>