

# How to clear memory on PIX55, TCX45, OR PIX28

433 [Frank Mateo](#) Wed, Dec 7, 2011 [Time Clocks](#) 0 6807

## AMANO.

### Introduction

How to clear memory on PIX55, TCX45, OR PIX28

1. Press / hold program button
2. Go to Other P5
3. Then dIAg 18
4. CLr d4
5. Choose 32 – clears memory

---

### Conclusion

Thank you for your time, and have a great day. As always, feel free to submit ideas on topics you want addressed in the Amano Knowledge Base using the comments feature.

Amano Cincinnati, Inc. reserves the right to make equipment changes and improvements which may not be reflected in this article. Portions of this article may have been updated to include the latest hardware or firmware version, if applicable. Amano assumes no liability for errors and/or omissions. If you should find any errors or unclear information, please notify Amano by posting a comment.

**Customer  
Support  
Information**

Call toll-free in the U.S.: 800-253-9836 (outside U.S. call 973-364-0294) or Fax: 973-364-1091  
Mailing address: Amano Cincinnati, Inc., 140 Harrison Ave., Roseland, New Jersey 07068  
Web site: [www.amano.com/time](http://www.amano.com/time) • E-mail: [support@amano.com](mailto:support@amano.com)

Online URL: <http://tkb.amano.com/article.php?id=433>