

How to obtain IP address for your FPT-40, program IP to FPT and Time Guardian

45 [Frank Mateo](#) Wed, Dec 15, 2010 [Time Guardian Series \(TG 5.x, TG Plus 2.x, TG Pro 4.x\)](#) 0
24618

How to obtain IP address for your FPT-40, program IP to FPT and Time Guardian:

- FPT-40
- Time Guardian 5.x, Time Guardian Plus 2.x, Time Guardian Pro 4.x

How to get IP address:

1. Go to start > run
2. Type cmd, enter
3. Type ipconfig
4. Take note of gateway and subnet mask
5. Type ping, then your ip address but change the last number, minus 1 or plus 1
6. When it is unreachable or times out, then

For FPT-40:

1. Take the unreachable ip, gateway, subnet to your clock
2. Program those items in the communication settings
3. Do a ping test in your pc, like before and it should be reachable now

For Time Guardian Series:

1. Edit > setup > clock
2. Answer questions, from the top, yes yes no yes
3. Press location terminal
4. Verify the name is FPT-40
5. 2nd tab
6. Change ethernet, enter the ip
7. Save, press the gree box check mark, 2 times until you go back to the main screen
8. To test communication, just go to communication
9. Highlight the fpt in the list

10. 4 green boxes at the bottom right, press the 2nd 1 from the left to set the time

Online URL: <http://tkb.amano.com/article.php?id=45>