

Wifi, Please insert usb drive error

576 [Frank Mateo](#) Thu, Dec 20, 2018 [MTX-15 Terminal](#), [Time Guardian Series](#), [Time Guardian Series \(TG 5.x, TG Plus 2.x, TG Pro 4.x\)](#) 0 4402

PROBLEM:

With the MTX30 Wifi time clock on adding the Wireless password for WIFI the display errors to "Please insert usb drive" when using LOAD PASSWORD

FIX:

Use a usb thumbdrive formatted with Fat32.

NTFS is not compatible.

Online URL: <http://tkb.amano.com/article.php?id=576>