

# How to verify communication settings for direct connect in Hand Punch units

74 [Frank Mateo](#) Mon, Jan 24, 2011 [HandKey Terminals](#) 0 3800

## How to verify communication settings for direct connect in Hand Punch units

### Answer:

Please check your connections. For com1 it will be connected with the serial 2 screw connection in the rear of your pc. Please secure connection at the HP terminal as well.

You may verify comm settings at the HP itself by:

1. Pressing clear + enter
2. Password 2
3. Set serial
4. Rs232 must be set to Yes
5. Set address must be set to 1

**Note:** You may need to supply your supervisor ID and hand

Online URL: <http://tkb.amano.com/article.php?id=74>