

EX-9000 All Clear

236 [Alex Nieves](#) Thu, Mar 10, 2011 [FAQ's](#), [How To's](#), [Tricks](#), [Tips](#) 0 2622

AMANO®

 
Introduction

How to clear the EX-9500 time clock?


Answer:

TURN DIAL AND SELECT INDEX #2

D.L.S START	D.L.S END	SIGNAL DURATION	IMPRINT		+	-	E
----------------	--------------	--------------------	---------	--	---	---	---

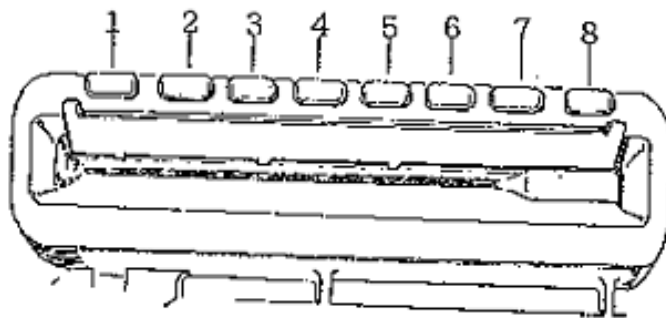

Simultaneously press buttons 2,4,6,8. While holding them down press and release the Reset button located to the right of dip switch 13. After movement of clock hands has finished release the buttons. NOTE: Both clock hands should stop at 12. This is an indication that the clear was done properly. If not then try again.

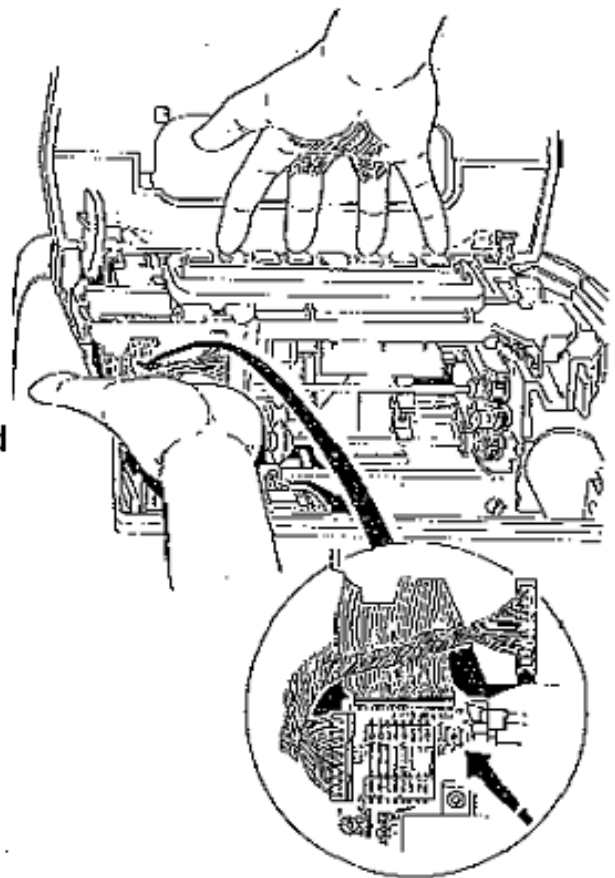

Conclusion

Thank you for your time, and have a great day. As always, feel free to submit ideas on topics you want addressed in the Amano Knowledge Base using the comments feature.

Amano Cincinnati, Inc. reserves the right to make equipment changes and improvements which may not be reflected in this article. Portions of this article may have been updated to include the latest hardware or firmware version, if applicable. Amano assumes no liability for errors and/or omissions. If you should find any errors or unclear information, please notify Amano by posting a comment.

Customer Support Information	Call toll-free in the U.S.: 800-253-9836 (outside U.S. call 973-364-0294) or Fax: 973-364-1091 Mailing address: Amano Cincinnati, Inc., 140 Harrison Ave., Roseland, New Jersey 07068 Web site: www.amano.com/time • E-mail: support@amano.com
---	---

Online URL: <http://tkb.amano.com/article.php?id=236>