

Not accepting cards

257 [Alex Nieves](#) Wed, Apr 6, 2011 [FAQ's](#), [How To's](#), [Tricks](#), [Tips](#) 0 6757

AMANO®

 
 
Introduction

MRX 35 DOES NOT ACCEPT CARDS.

ANSWER:

The most common reason is that the actuator came out of place. To fix this:

- 1- Unplug the clock.
- 2- Remove the top cover.
- 3- Find the actuator behind button number 5.
- 4- Push down on the actuator until it snaps back in place. (see image below)
- 5- Put cover back on and test.

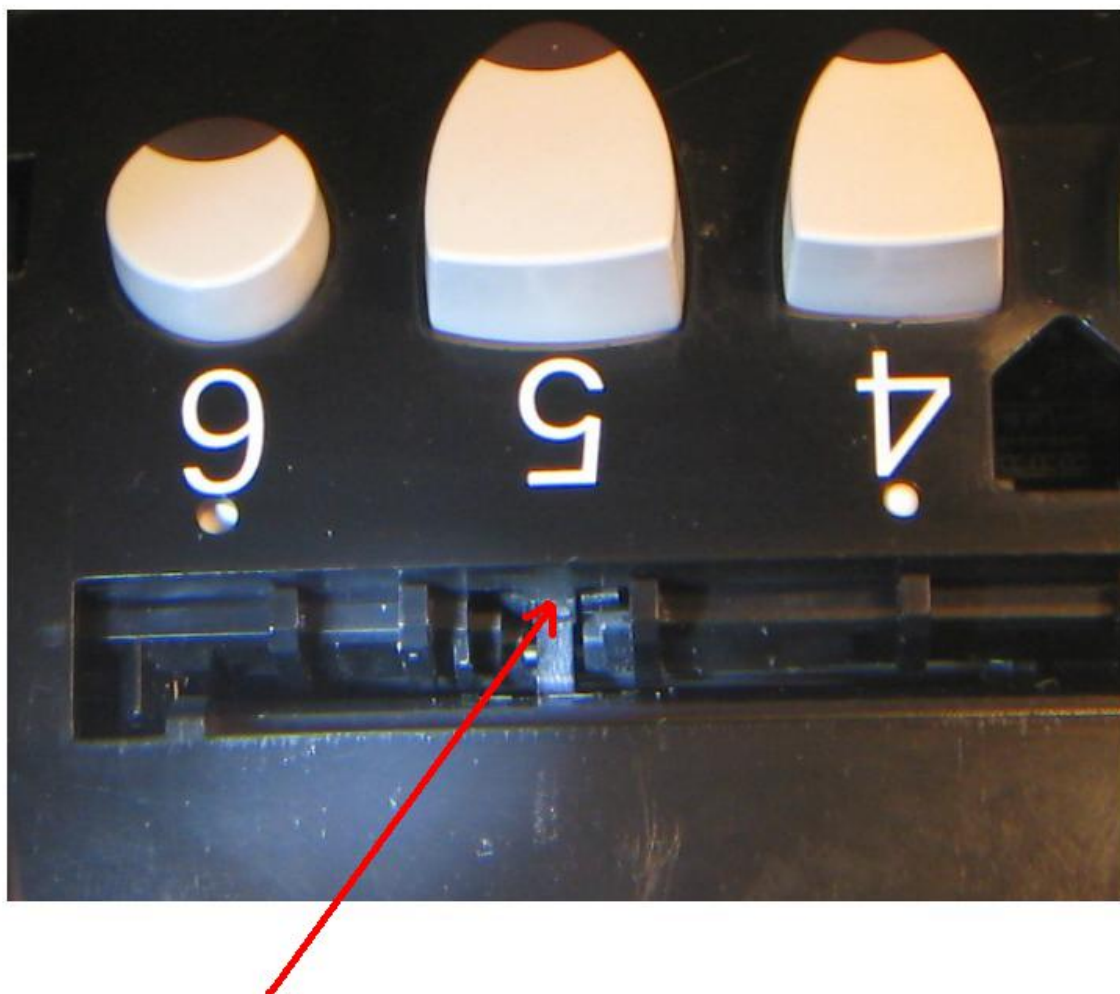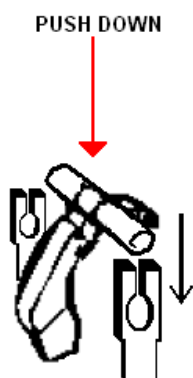

Conclusion

Thank you for your time, and have a great day. As always, feel free to submit ideas on topics you want addressed in the Amano Knowledge Base using the comments feature.

Amano Cincinnati, Inc. reserves the right to make equipment changes and improvements which may not be reflected in this article. Portions of this article may have been updated to include the latest hardware or firmware version, if applicable. Amano assumes no liability for errors and/or omissions. If you should find any errors or unclear information, please notify Amano by posting a comment.

**Customer
Support
Information**

Call toll-free in the U.S.: 800-253-9836 (outside U.S. call 973-364-0294) or Fax: 973-364-1091
Mailing address: Amano Cincinnati, Inc., 140 Harrison Ave., Roseland, New Jersey 07068
Web site: www.amano.com/time • E-mail: support@amano.com

Online URL: <http://tkb.amano.com/article.php?id=257>