

How to verify communication settings for direct connect in Hand Punch units

74 [Frank Mateo](#) Mon, Jan 24, 2011 [HandKey Terminals](#) 0 3459



Introduction

How to verify communication settings for direct connect in Hand Punch units

Answer:

Please check your connections. For com1 it will be connected with the serial 2 screw connection in the rear of your pc. Please secure connection at the HP terminal as well.

You may verify comm settings at the HP itself by:

1. Pressing clear + enter
2. Password 2
3. Set serial
4. Rs232 must be set to Yes
5. Set address must be set to 1

Note: You may need to supply your supervisor ID and hand

Conclusion

Thank you for your time, and have a great day. As always, feel free to submit ideas on topics you want addressed in the Amano Knowledge Base using the comments feature.

Amano Cincinnati, Inc. reserves the right to make equipment changes and improvements which may not be reflected in this article. Portions of this article may have been updated to include the latest hardware or firmware version, if applicable. Amano assumes no liability for errors and/or omissions. If you should find any errors or unclear information, please notify Amano by posting a comment.

**Customer
Support
Information**

Call toll-free in the U.S.: 800-253-9836 (outside U.S. call 973-364-0294) or Fax: 973-364-1091
Mailing address: Amano Cincinnati, Inc., 140 Harrison Ave., Roseland, New Jersey 07068
Web site: www.amano.com/time • E-mail: support@amano.com

Online URL: <http://tkb.amano.com/article.php?id=74>