

How to Reinitialize the PIX-200 (Default Values)

Remove the cover and press (+) and (E) buttons at the same time and hold for more than 2 seconds.

Press **+1 Hour** button first and then the **+** button then hold both buttons for 2 seconds.

▲ will be on, release both the **+1 hour** and **+** buttons (within 3 seconds after the ▲ has been on)

Press the **E** button within 1 second after releasing both buttons.

The PIX-200 clock will display the CPU version for 2 seconds and then display No.1.

Follow this procedure to reinitialize the PIX-200:

Step 1. Keep pressing the (+) button until you see **9** displayed.

Step 2. Press the (E) button and you should see “**00**” displayed with the first “**0**” [on the left] blinking.

Step 3. Now press the (+) button until the “0” changes to “**8**” and then press the (E) button. The second “**0**” will be blinking.

Step 4. Press the (+) button until it changes to “**8**” and then press the (E) button.

Step 5. You should see “**CLEAR**” displayed. The press the (E) button, put the cover back on, and lock it.