

AMANO®

PIX-15

Electronic Time Recorder

Operation Manual



Thank you...

for purchasing another fine product from
Amano Cincinnati, Inc.

Important

Note that the government standard for Daylight Saving Time (DST) is subject to change. Your clock is factory-set for correct DST based upon when it was manufactured, but any revision to DST begin or end dates may require updating the system-set DST calendar.

If you live in Arizona, Hawaii, parts of Indiana, or any other area that does not use Daylight Saving Time, refer to this document's DST settings instruction for details regarding disabling the DST function.

Do not return this clock to the retailer. If you have any questions or need assistance, please call us toll free at:

1-800-253-9836

Proprietary Notice

This document contains proprietary information and such information may not be reproduced in whole or part without the written permission from Amano Cincinnati, Inc. 140 Harrison Ave., Roseland, New Jersey 07068. Amano Cincinnati, Inc. reserves the right to make equipment changes and improvements, which may not be reflected in this document.

We recommend that this document be read in its entirety before any attempt is made to operate the equipment.

Need Ribbons, Keys and Accessories?


Visit

www.amano.com

or

Call - (800)-253-9836


Your PIX-15

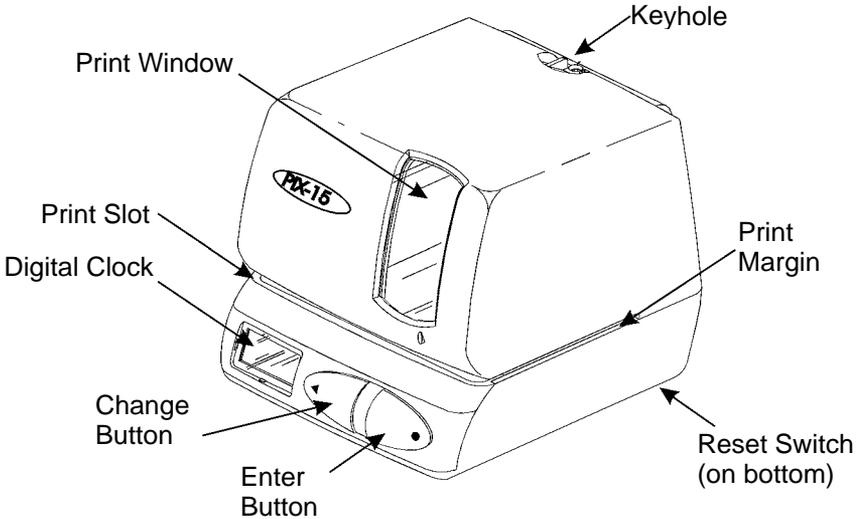


Removing the Cover and Packing Materials

Note: You must remove the packaging spacers from the printer block and the printer carriage before attempting to use your PIX-15.


1. Lift the printer block and remove the spacer.

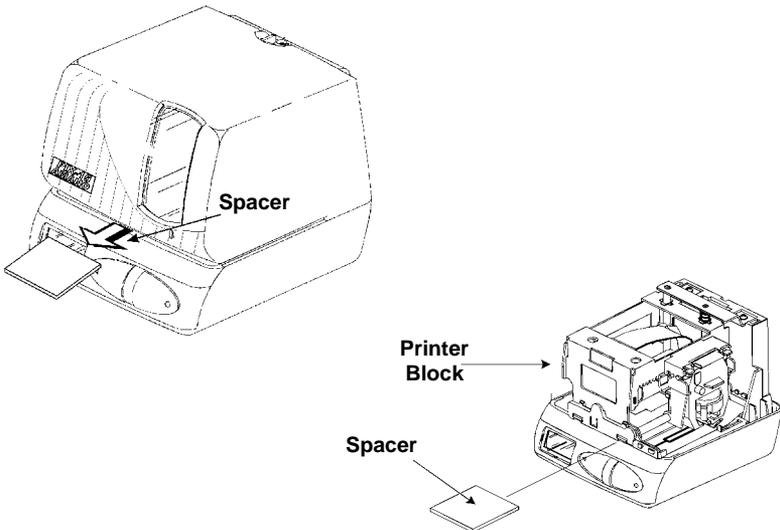

-
2. Insert the key provided and turn clockwise to open the case. Lift the cover to remove.

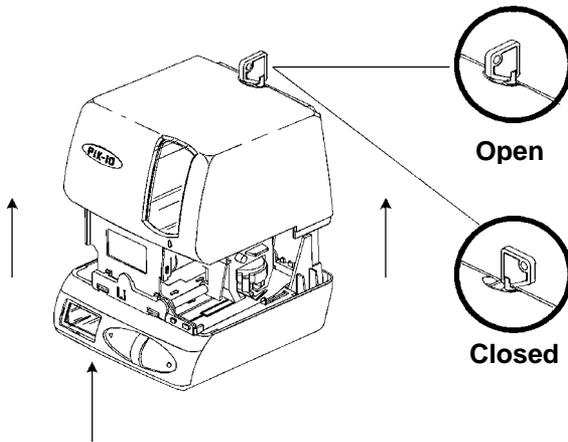

3. Remove the spacer between the Ribbon Cartridge and the Printer Carriage.

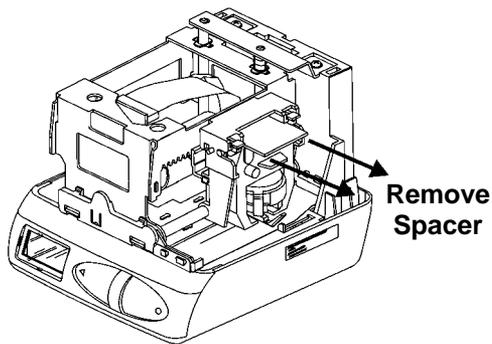


4. Re-install the cover. Your PIX-15 is ready for use!

Before You Change Any Settings

Take a moment to familiarize yourself with the items explained below.

The Front Panel

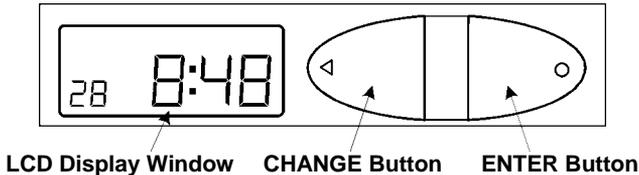

Normally, the **Display Window** shows the date and time. When you use the Quick Set or Program Mode to change the settings of the PIX-15, the instructions to change the clock are shown in this window.


The two buttons on the front panel are used to navigate through the Quick Set and Program Mode to change the clock's settings.

The left button is marked with a ◀ symbol. It is called the **CHANGE Button**. Use this button to change the information shown on the display when you are in the Quick Set or Program Mode.

The right button is marked with a ● symbol. It is called the **ENTER Button**. When you are in the Quick Set or Program Mode, use this button to enter the setting shown on the display into memory.

The Reset Button

The **RESET Button** (which is long) is located in the right lower corner of the bottom of the clock.

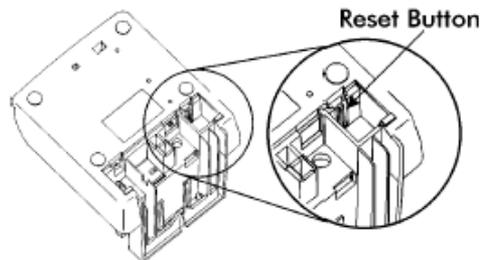

Please Note:

You do not need the key to set the time or to program the clock!! However, you do need the key to change the ribbon, or mount the clock on the wall (see page 9).

If you have any questions, please call 1-800-253-9836.

Making a Test Print

1. Plug in the power cord.
2. Insert a piece of paper or time card into the PIX-15. The clock will automatically print YEAR, MONTH, DATE and TIME with AM or PM (in Pacific Time).

'98 MAR 9 PM 4:05

Note: The PIX-15 will automatically adjust for Daylight Saving Time. If these conditions are unsatisfactory, you must change the program settings.

3. If the imprint is satisfactory, and you are going to place the PIX-15 on a desk, table, or shelf, the PIX-15 is ready to be used.
4. In order for you to set the time or change the print style, you must enter a code. Choose a code from the list below that best fits your needs. Continue to the next page for instructions on how to enter your code.

Code	Print Style	Print Direction
6510	DAY, 12H, 60 th	Right Side Printing
6210	DAY, 24H, 10 th	Right Side Printing
6810	DAY, 24H, 100 th	Right Side Printing
6520	DATE, 12H, 60 th	Right Side Printing
6620	DATE, 24H, 60 th	Right Side Printing
6820	DATE, 24H, 100 th	Right Side Printing
6530	MONTH, DATE, 12H, 60 th	Right Side Printing
6630	MONTH, DATE, 24H, 60 th	Right Side Printing
6830	MONTH, DATE, 24H, 100 th	Right Side Printing
6570	YEAR, MONTH, DATE, 12H, 60 th	Right Side Printing
6071	YEAR, MONTH, DATE, RCV'D	Right Side Printing
6072	YEAR, MONTH, DATE, SENT	Right Side Printing
6073	YEAR, MONTH, DATE, FAX'D	Right Side Printing
6074	YEAR, MONTH, DATE, VOID	Right Side Printing
6075	YEAR, MONTH, DATE, PAID	Right Side Printing
6076	YEAR, MONTH, DATE, CFM'D	Right Side Printing
6077	YEAR, MONTH, DATE, APR'D	Right Side Printing
6078	YEAR, MONTH, DATE, CMPL'D	Right Side Printing
6079	YEAR, MONTH, DATE, ORIGN	Right Side Printing
6070	YEAR, MONTH, DATE, FILE	Right Side Printing

Note: If you cannot locate the desired print style from the above list, please contact us at 1-800-253-9836 for assistance.

 
Entering the Clock Program

The following steps describe how to get into the clock program. To set the print style and time, use a code chosen from the list (see page 4). For example, the following directions use code 6570.

1. Entering a Code

- Press and hold the **RESET** button on the bottom of the clock. (Refer to page 3 for location.)
- While holding down the **RESET** button, press and hold the ● right button on the front panel.
- While holding the ● right button, release the **RESET** button.

- Next release the ● right button and **Prog** will flash in the display.

A rectangular display box containing the text "Prog".

 
- Tap the ● right button. The display will show 0000, and the first digit will flash.

A rectangular display box containing the text "00 00". The first "0" is highlighted with a starburst effect.


- Tap the ◀ left button until the first number of your code appears, then tap the ● right button and the second digit will flash.

A rectangular display box containing the text "60 00". The "6" is highlighted with a starburst effect.

- Tap the ◀ left button until the second number of your code appears, then tap the ● right button and the third digit will flash.

A rectangular display box containing the text "65 00". The "5" is highlighted with a starburst effect.

 - Tap the ◀ left button until the third number of your code appears, then tap the ● right button and the fourth digit will flash.

A rectangular display box containing the text "65 70". The "7" is highlighted with a starburst effect.

- Tap the ◀ left button until the fourth number of your code appears, then tap the ● right button.

A rectangular display box containing the text "65 70". The "0" is highlighted with a starburst effect.

- With the display flashing all four digits, tap the ● right button again and **PIRE** will display.

2. Setting the Year, Month and Date

 
 
 
 
- With the display flashing **PI dRtE**, tap the ● right button and the display will show year, month, and date.
- Press the ◀ left button until the correct year appears, then tap the ● right button.
- Press the ◀ left button until the correct month appears, then tap the ● right button.
- Press the ◀ left button until the correct date appears, then tap the ● right button.
- When the display flashes the correct year, month and date, tap the ● right button.
- When the display flashes **PI dRtE**, tap the ◀ left button to move to Setting the Time (**P2CLoc** will display)



3. Setting the Time

When setting the time, you must use a 24 hour and 60 minute format (i.e., 1:00 pm = 13:00). This will **NOT** make the clock print in military time, but simply tells the clock am from pm.

- With the display flashing **P2CLoc**, tap the ● right button.
- The small “12” will flash. Tap the ● right button again.
- The hour digits will flash. Tap the ◀ left button until the correct hour appears. Remember to use a 24-hour format (2:00 pm = 14:00). Then tap the ● right button.
- The minute digits will flash. Tap the ◀ left button until the correct minutes appear, then tap the ● right button.
- When the display flashes **P2CLoc**, tap the ◀ left button to move to the beginning of the Daylight Saving Setting (**P3bdLt** will display).



4. Setting the Beginning Date of Daylight Saving Time (DST)

Note: The government standard for DST is subject to change. Your clock is factory-set for correct DST based upon when it was manufactured, but any revision to DST begin or end dates may require updating the system-set DST calendar.

The steps below change the begin date for DST. Updating the begin date for DST needs to be done just one time*, since the clock's rolling calendar function will auto-calculate the begin date for each year thereafter. To change the end date for DST, refer to the next section.

- With the display flashing P3bdL†, tap the ● right button.
- Tap the ◀ left button until the correct year appears, then tap the ● right button.
- Tap the ◀ left button until the correct month appears, then tap the ● right button.
- Tap the ◀ left button until the correct date appears, then tap the ● right button.
- With the display flashing the correct year, month and date, tap the ● right button.
- With the display flashing P3bdL†, tap the ◀ left button to move to the end of the Daylight Saving Setting (P4EdL† will display).

 


5. Setting the End Date of Daylight Saving Time (DST)

Note: The government standard for DST is subject to change. Your clock is factory set for correct DST based upon when it was manufactured, but any revision to DST begin or end dates may require updating the system-set DST calendar.

The steps below change the end date for DST. Updating the end date for DST needs to be done just one time, since the clock's rolling calendar function will auto-calculate the end date for each year thereafter. To change the begin date for DST, refer to the previous section.

- With the display flashing P4EdL†, tap the ● right button.
- Tap the ◀ left button until the correct year appears, then tap the ● right button.
- Tap the ◀ left button until the correct month appears, then tap the ● right button.



-
- d. Tap the ◀ left button until the correct date appears, then tap the ● right button.



- e. With the display flashing the correct year, month and date, tap the ● right button.



- f. With the display flashing P4EdLT, tap the ◀ left button to move to the end of the Program (End will display).



Note: To disable the Daylight Saving Setting, set the beginning and ending date to the same date.

6. Exiting the Program Mode

When the display flashes End, tap the ● right button to exit the program mode.




7. The PIX-15 is ready for use!

Note: If you do not use Daylight Saving Time, you need to disable the Daylight Saving Time feature. Putting the same dates in program level P3 and P4 does this. If you need assistance or have any questions, please contact us at 1-800-253-9836.

***Note:** The PIX-15 uses a Lithium battery to maintain the user settings in case of a power failure. If a power failure occurs and the Lithium battery is dead, the time clock settings may revert to default settings (i.e., DST Begin and End dates may change).

Replacing the Ribbon

1. Insert the key into the key hole (see page 2 for keyhole location) and turn the key.
2. Grab the cover on both sides and lift to remove it.
3. Pull the two catches (B) upward and hold them with your index and middle fingers. Remove the ribbon cassette.

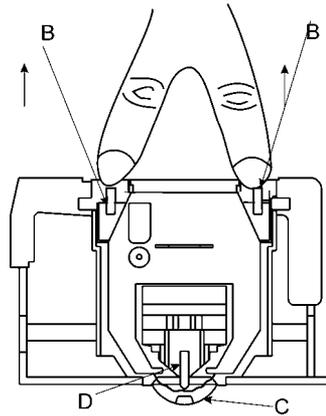


Note: If the print mechanism is in the down position and a piece of paper cannot be inserted, press the **RESET** button to move the carriage up. This will make the ribbon installation easier.

4. Insert a new ribbon between the ribbon guide (C) and the printer head (D).
5. Turn the knob on the cassette clockwise one turn to take up any slack in the ribbon.
6. To replace the cover, remove the key, align the lower back corners to the base of the clock and snap the cover down into position.

Mounting the Clock

1. Remove the cover as per the instructions above.
2. With the clock facing you, remove the mounting bracket by pulling the top tabs (A) towards you, and then pushing the tabs down (see below).

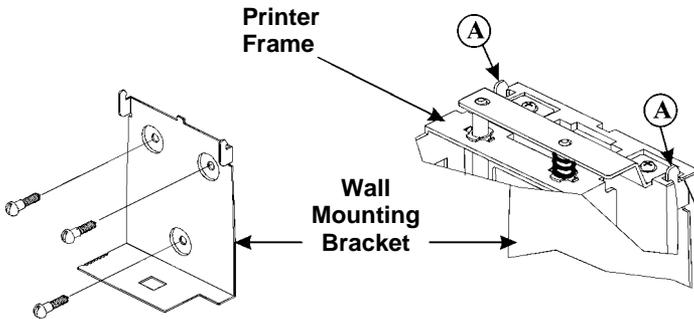

3. Securely mount the PIX mounting bracket on the wall using three #10 wood screws or equivalent.
4. Place the PIX-15 on the Mounting Bracket by sliding the top tabs into the slots on each side of the case. Push the PIX-15 back and down against the Mounting Bracket until the PIX-15 snaps into place. Be careful not to pinch the power cord with the bracket. Installing the cover will secure the PIX-15 to the mounting bracket.

Error Messages

**Home Sensor,
Motor Carriage
Stuck**

E1 Prnt

**Timing Sensor,
Motor Carriage
Stuck**

E2 Prnt

Home Sensor

E3 Prnt

Carriage Stuck

E4 Prnt

**General
Print Error**

E_r Prnt

**Daylight
Saving Time
Program**

dL_t

If any of these messages appear on the display, unplug the clock from your outlet then plug it back in again. If the message still appears on your display, please contact us at 1-800-253-9836 for assistance.

CAUTION:

Do not use any chemical solvents or oils to clean or lubricate your PIX-15. This will damage your clock. To clean the inside of your clock, blow it out with air.

Specifications

Power Requirements: For PIX-15 Input: AC16.5V, 60Hz, 0.6A (Max.)
For AC Adapter: AC120V \pm 10%, 60Hz
AC230V \pm 10%, 50Hz
AC240V \pm 10%, 50Hz

Ambient Temperature: -10°C to 45°C (14°F to 113°F)

Ambient Humidity: 10% to 90% (no condensation)

Dimensions: 140mm (W) x 150mm (H) x 165mm (D)
(5½" x 6" x 6½")

Weight: 1.8Kg (4.2Lbs.)

Environment: Indoor use only; dust-free environment
Keep out of direct sunlight

PIX-15 with 120V AC Adapter:

Listed and Certified by Underwriters Laboratories, Inc.



AMANO®

Corporate Headquarters
140 Harrison Avenue, Roseland, NJ 07068-1239
(800) 526-2559

www.amano.com