

## PIX-10/15/21/28/(22) Directions

**\*\* Program (Pro9) *enter*: 8088** (first digit blinks, etc)

**P1 dAtE** (07 04 10)

**P2 CLoc** (12 or 24 11:26)

**P3 bdLt** (08 03 09)

**P4 EdLt** (07 11 04)

Pre-Set End

**P5 P5tL** (Symbols, etc.)

**P6 Lang**

**P7 Prdr** (left or right)

**P8 APrt** (on P; OFF; on P:5)

**P9 ZErO** (on or off)

**P0 dIAg**



**d1 LCd**

**d2 nPrt**

**d3 CLr** (00 – stays same; 32 – clear memory)

**End**